

RESET YOUR SAFETY SWITCH

WARNING
IF YOU ARE UNSURE, STOP AND CALL AN ELECTRICIAN



Vulley
ELECTRICAL

VULTEY.COM.AU
0493 736 714

START HERE

IN YOUR SWITCHBOARD, IDENTIFY THE TOGGLE THAT IS OFF



ATTEMPT A QUICK RESET
Ensure the toggle is fully off, then try to move it to the **ON** position



DOES IT STAY ON?

YES

POWER RESTORED
Monitor for future trips

NO

UNPLUG ALL ELECTRICAL ITEMS
Remove all plugs from outlets. Turning off is not sufficient – **REMOVE ALL PLUGS**



ATTEMPT A RESET

Slowly move the toggle to the **ON** position



DOES IT STAY ON?

NO

FAULT IN RCD/WIRING

CALL ELECTRICIAN
0493 736 714

YES

POWER RESTORED

FIND FAULTY APPLIANCE

Plug in and **TURN ON** each appliance one by one until you find the faulty one.



TIPS

- Common problematic appliances: **FRIDGES, DISHWASHERS, WASHING MACHINES, TOASTER, KETTLE**
- Lighting circuits are harder to rectify on your own since most items are hard wired. Common problems is water ingress into external fittings after rain. **CALL ELECTRICIAN**